 


Sony Handycam Camcorder.

Switch on the camcorder with the 13 Amp power supply. Because the battery is not retaining the time and date you will have set this every time. Just keep pressing 'NEXT' until the button changes to 'OK' then press 'OK'

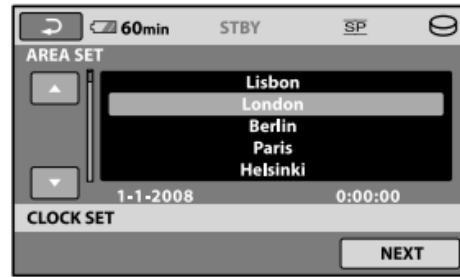

Once back at the home screen you will have to exit the 'Demo Mode'


Press the  icon.

Then press the (1) toolbox icon and then arrow down to get to (2) General Set.

Select Demo Mode and then Off.

Press OK followed by 

Then press OK again to return to the home screen.

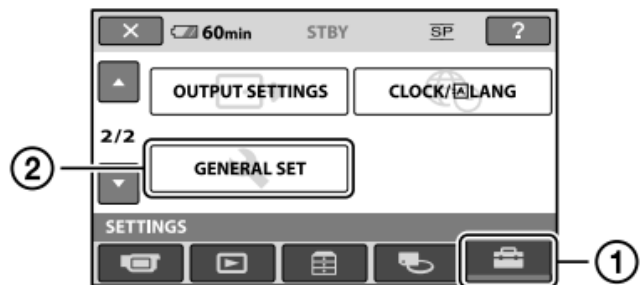

Once back in the home screen you will need to zoom the picture so the stage fills the screen. Use the lever on top of the camera to adjust the zoom.

This image is sent to the Stage Manager's corner and is displayed on a TV monitor fixed to the wall. This monitor will have to be powered on before the start of a show.

This image is sent to the Club Room and is displayed on a screen using the Club Room Projector. This projector normally finds the signal automatically, but it is sometimes necessary to select the visual source as 'AV'.