

Instructions To Start The Sound / Cinema

- 10** Switch on Sound P.C.
- 11** Switch on Monitor Two
- 12** Switch on Power for Projector.
- 13** Start Projector with PC App.
- 14** Start SCS software
- 15** Switch on FOH Amplifier.

If Required -

- 16** Switch on DVD Player
- 17** Switch on Show Relay Amp.
- 18** Switch on Back Stage Amp.
- 19** Lower Projection Screen
- 20** Select Video I/P with HDMI switch
- 21** Select Audio I/P on Mixer Desk